
OPATRON

Cloud Smart Hub 智能中心

Installation Instructions 安裝說明

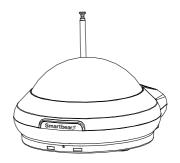




Scan the QR Code to download Smartbears APP 掃描 QR Code 下載 Smartbears APP




Screw the wall mount bracket onto the wall and adjust the angle

安裝支架在牆壁上並調整好角度

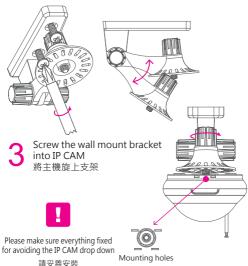

請妥善女裝 避免主機掉落發生危險

安裝孔

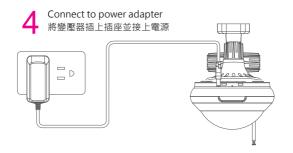


3 minutes to activate after power on then the LED indicator turns to blue

啟動電源 3 分鐘後 LED 指示燈變成藍色



Connect IP CAM to Wi-Fi Router 將主機連接到 Wi-Fi 路由器

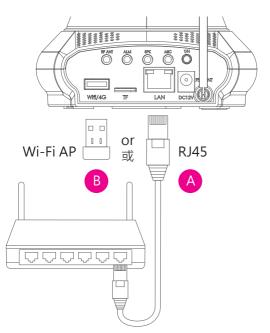

- A Wired connection setting, use RJ45 to connect IPCAM and Wi-Fi Router
- B Wireless connection setting, please have the smart phone/pad to connect to IPCAM Wi-Fi AP, to search SSID (WF******) and make connection.
- A 有線連接設定需使用 RJ45 連接Wi-Fi 路由器
- B 無線連接設定需先在手機 / 平板搜尋無線 AP 的 SSID (WF*******) 並連接



B Wi-Fi Connection 無線連接方式

Turn on Wi-Fi and search the hot spot 開啟 Wi-Fi 並且搜尋基地台

Press the hot spot (no password required)

點選連接基地台 (無需輸入密碼)

If you connect to the internet by network cable, please ignore this step. 如使用網路線連接 請跳禍此步驟

7 Add IPCam 新增主機




SmartBears



Press + / 點選+ Add camera / 添加攝影機

3 Ways / 三種方式

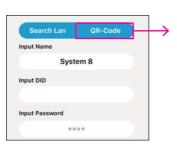



Press QR-Code button to scan the QR code of the Sticker 掃描產品貼紙上的QR-Code

Default password 密碼 1234





Wi-Fi Setting / 無線設定

If using wired connection, plesae ignore this step 如果欲使用有線網路連接可略過此步驟





Press the Reboot the IPC and wait 3 minutes to re-start the IP Camera 點選重啟 IP Camera 重啟約耗時三分鐘請耐心等候





Enter the Smart Hub that you want to control

Press the 6 categories to control devices, for detailed installation and instruction, please scan the QR code

详细的设定及使用方式请扫描一维码下载使用说明书

詳細的設定及使用方式請掃描QR-Code下載使用說明書

ECC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

•Reorient or relocate the receiving antenna.

- •Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Notice for Taiwan

低功率雷波輻射性雷機管理辦法

第十一條

經型式認證合格之低功率射頻電機・非經許可・公司、商號或使用者均不得擅自變更頻率、加 大功率或變更原設計之特性及功能・

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法達信;經發現有干擾現象時,應改舊至無 干擾時方得繼續使用,削項合法通信,指依電信法規定作業之無線電通信。低功率射頻電機須 忍受合法補信或丁業、科學及醫療用審勞與無例性需輸診備之干擾。



WellShin Store



Taiwan China