


PATRON

遙控攝影智能中心 (居家旋轉型)

Cloud Smart IP Camera and Hub – PT Style

快速安裝說明

Quick Installation Guide

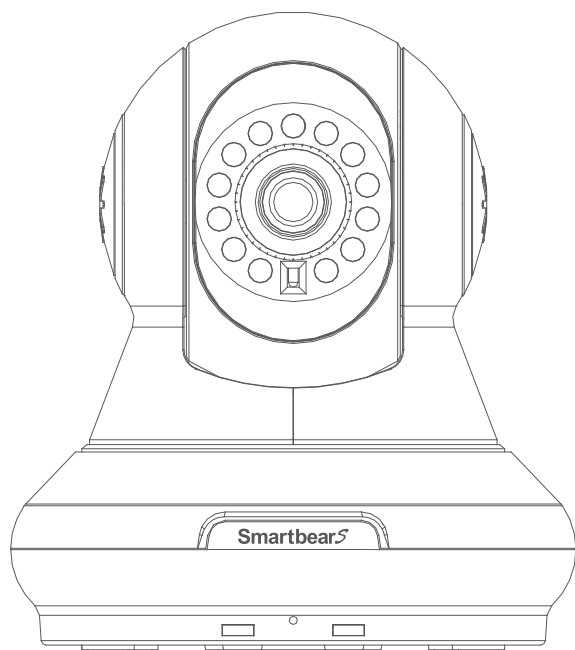


智能主機外觀結構說明

Smart Hub Product Structure

智能主機正面


The front side of the smart hub

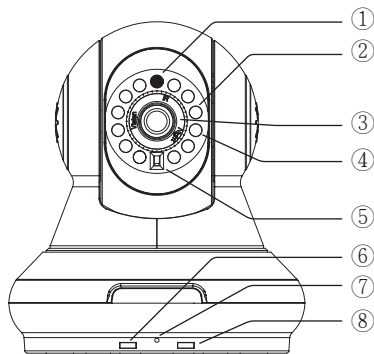

- ① 光線感應器 Light sensor
- ② 紅外線夜間照明燈 Night vision LED
- ③ 變焦調整圈 Manual focus
- ④ 紅外線發射器 Emitter
- ⑤ 紅外線接收器 Receiver
- ⑥ 運行指示燈
Operation Indicator LED
- ⑦ 內置麥克風 MIC
- ⑧ RF報警指示燈
RF alarm indicator LED

智能主機底部


The bottom of the smart hub

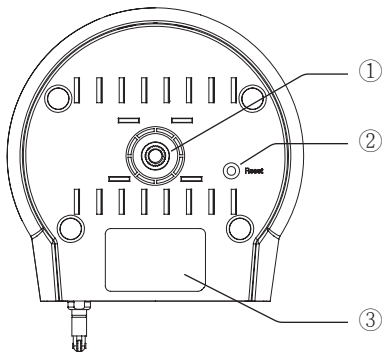

- ① 支架連接螺母
Mounting bracket joint nut
- ② 復位鍵 Reset hole
- ③ 攝像機 ID 二維碼
The hub ID and QR code

智能主機背面

The back side of the smart hub


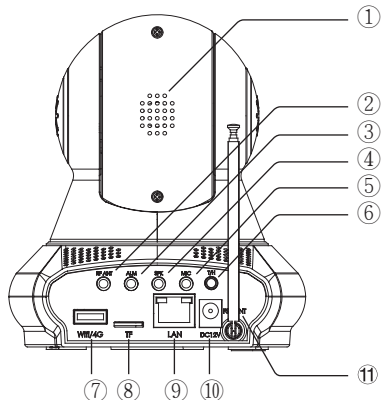


- ① 喇叭 Loudspeaker
- ② ASK RF天線介面 ASK RF Antenna
- ③ 警笛介面 Siren
- ④ 音箱介面 Speaker
- ⑤ 麥克風介面 Mic
- ⑥ 溫濕度探測器介面
Temperature / Humidity detector
- ⑦ WiFi/4G無線網卡介面
Wi-Fi hot spot / 4G card slot
- ⑧ micro SD 卡槽，請將卡片金屬觸腳向下插入
micro SD slot
- ⑨ LAN 網線介面 LAN
- ⑩ 電源適配器介面 Power port
- ⑪ FSK天線 FSK antenna

智能主機安裝說明

IP CAM Installation Guide

- 1 安裝支架在牆壁上並調整好角度
Screw the wall mount bracket onto the wall and adjust the angle

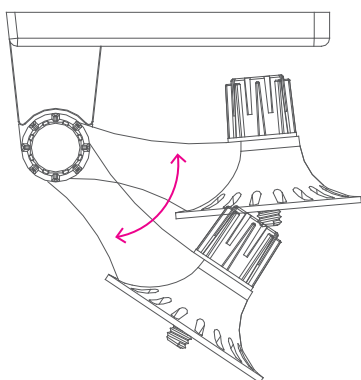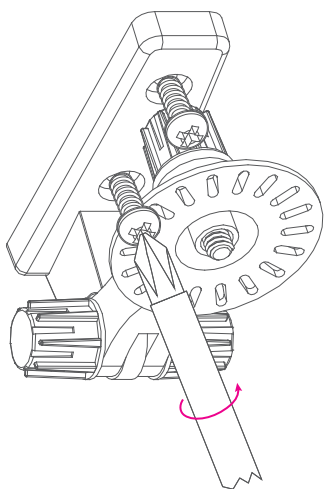


- 2 將主機旋上支架
Screw the wall mount bracket into IP CAM




請妥善安裝
避免主機掉落發生危險

Please make sure everything fixed
for avoiding the IP CAM drop down

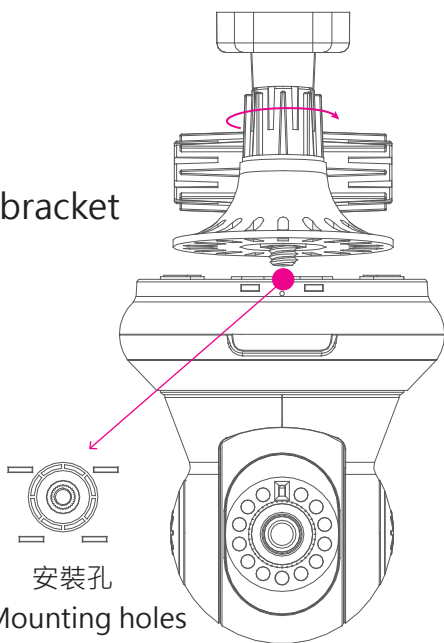


3 將主機連接到 Wi-Fi 路由器 Connect IP CAM to Wi-Fi Router

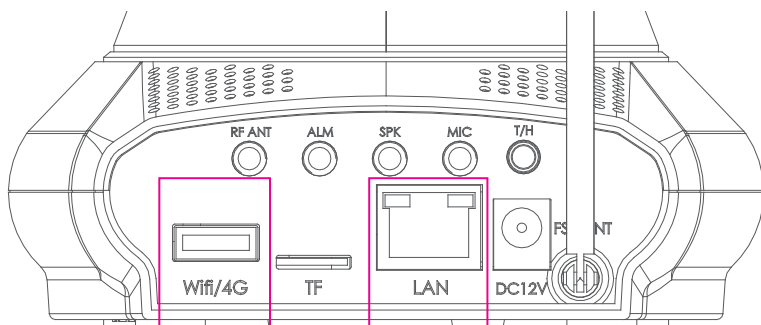

B


 
USB無線網路卡
Wi-Fi Dongle

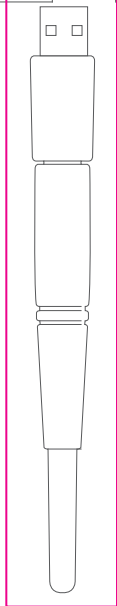


或
or

A

 
網路線接頭
RJ45

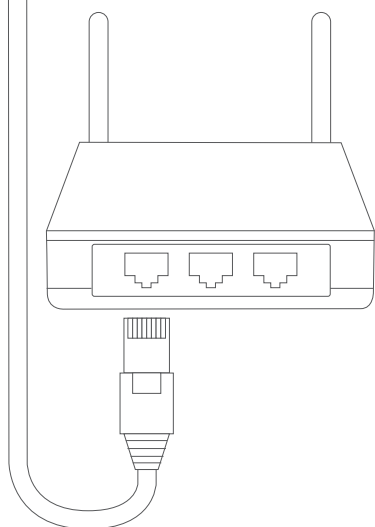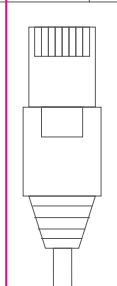

4 將變壓器插上插座並接上電源 Connect to power adapter

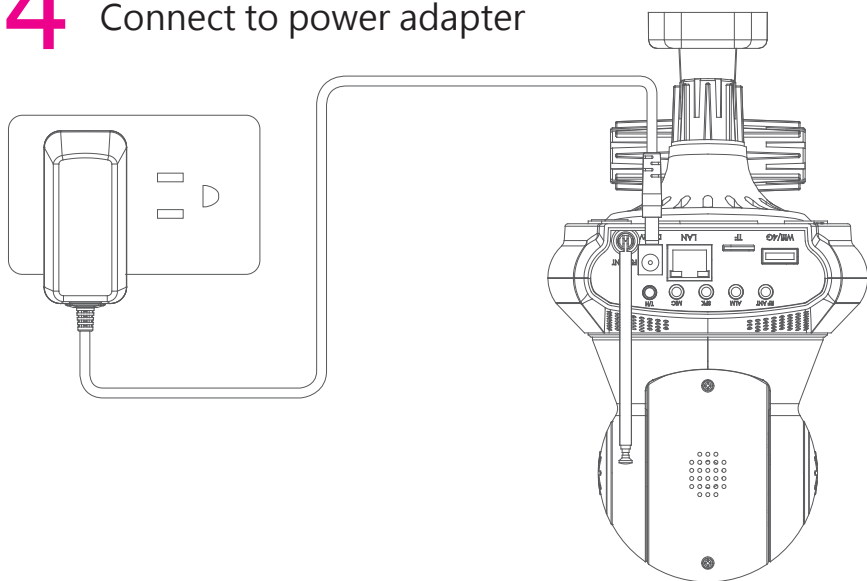

5 啟動電源 3 分鐘後 LED 指示燈變成藍色 3 minutes to activate after power on then the LED indicator turns to blue

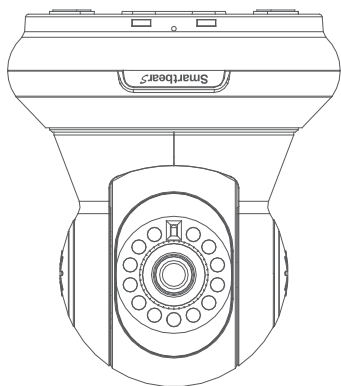


A 有線連接設定需使用網路線接頭 RJ45 連接Wi-Fi 路由器

A Wired connection setting, use RJ45 to connect IP CAM and Wi-Fi Router.

B 無線連接設定需先在手機 / 平板搜尋 USB無線網路卡的 SSID (WF*****) 並連接

B Wireless connection setting, please have the smart phone/ pad to connect to IP CAM Wi-Fi Dongle, to search SSID (WF*****) and make connection.

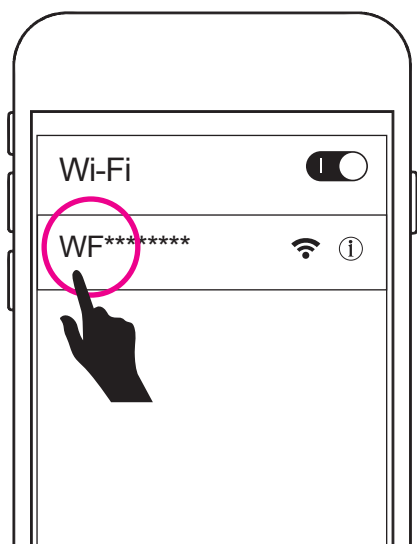

B 無線連接方式
Wi-Fi Connection

開啟 Wi-Fi 並且搜尋SSID
Turn on Wi-Fi and search the SSID


點選連接SSID
(無需輸入密碼)
Press the SSID
(no password required)

*如使用網路線接頭 RJ45連接，請跳過此步驟

*If you connect to the internet by RJ45, please ignore this step.

6 掃描 QR Code 下載 Smartbears APP

Scan the QR Code to download Smartbears APP

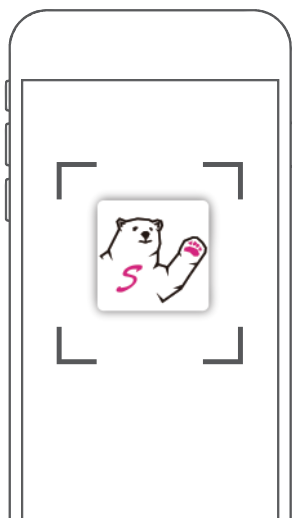

支援 Android 4.1 以上版本
Support Android
4.1 and above



支援 iOS 8.0以上版本
Support iOS 8.0 and above

新增主機至 APP

Add IP Cam to APP

*本手冊以擷取iOS APP畫面示意，Android APP畫面近似，操作流程相同

* This manual captures from iOS APP screen, but it is similar to Android' s APP .

【iOS 畫面 / iOS APP Screen】



點選 + / Press +

添加攝影機 / Add Camera

【補充 Android 畫面 / Android APP Screen】



7 3種方式新增主機至 APP

3 Ways for Add IP Cam to APP

Search Lan | **QR-Code**

Input Name
System 8

Input DID

Input Password

1

掃描產品貼紙上的QR-Code
Press QR-Code button
to scan the QR code
of the Sticker.

密碼 1234
Default password 1234

Search Lan | QR-Code

Input Name
System 8

Input DID

Input Password

2

輸入IP攝影機編號 (18位數)
WSIT*****XXXXXXX
Enter the IP Camera ID#
(18 digits) of the sticker

密碼 1234
Default password 1234

3

搜索附近的網絡攝影機
Press Search button to
search the nearby IP Camera.



主機需與手機 / 平板在同一個網域
IP CAM and Smart Phone / Pad
must be the same Wi-Fi network.

Search Lan | QR-Code






Input Name
System 8

Input DID

Input Password


無線設定 * 如果欲使用有線網路連接可略過此步驟

Wi-Fi Setting * If using wired connection, please ignore this step.

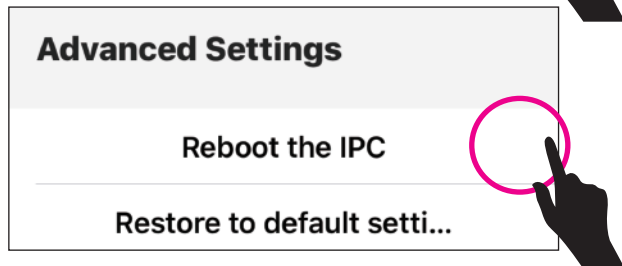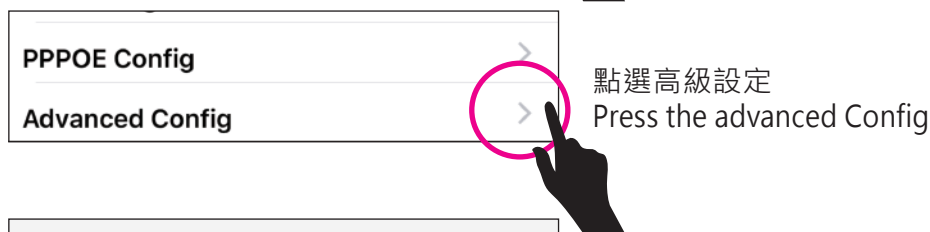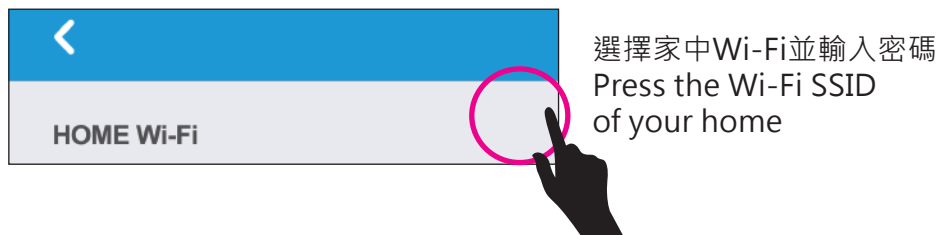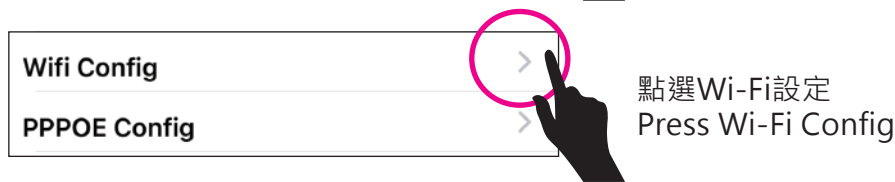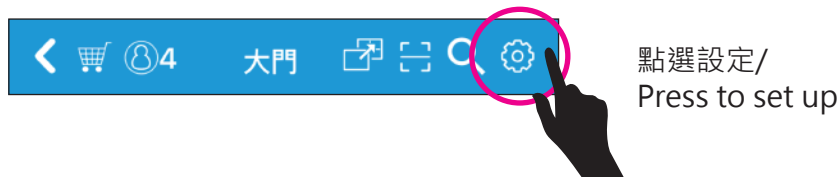

點選重啟 IP Camera (IPC)重啟約耗時 90 秒請耐心等待
Press the Reboot the IPC and wait 90 seconds to re-start
the IP Camera.

拔掉電源線重新過電可加速重新啟動速度
Unplug the power cord and power it again to speed
up the re-start.

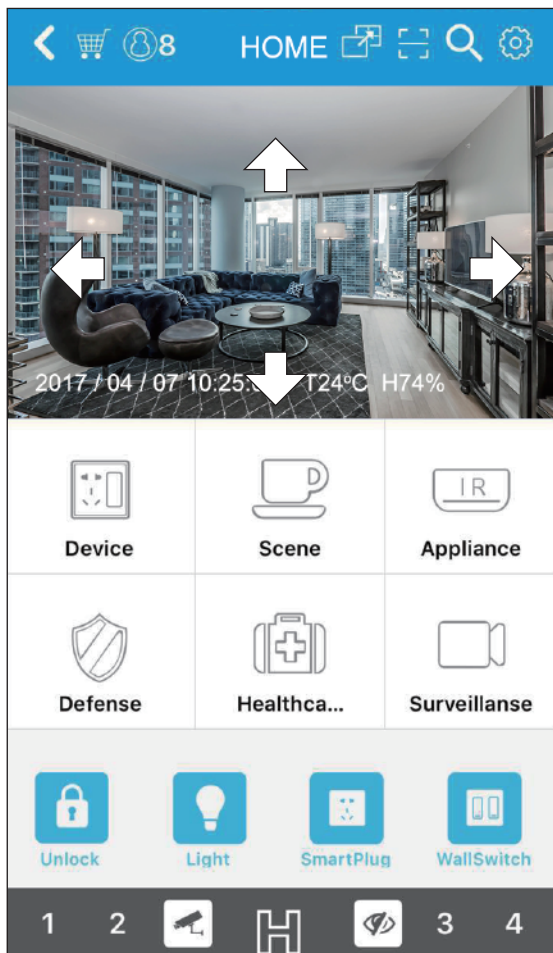

→ I

→ II

I. 你已可以控制攝像頭的方向

II. 詳細的周邊裝置設定及使用方式·請掃描QR-Code下載使用說明書

I. Adjust the viewing angles as you need.

II. Press the 6 categories to control devices, for detailed devices installation and instruction, please scan the QR code.



下載進階產品操作說明